



INTECNEA S.L.

GRINDING PLANT

Section	00
Equipment	-
Pos No	-
Revision	00
Page No	1/4

TABLE OF CONTENTS

1. GENERAL INFORMATION

(1.FOLDER)

- 1 Safety Precaution
 - 1.1 Corporate Preventions
 - 1.2 Personnel Safety
 - 1.3 Work Safety
 - 1.4 Staff Choise and Competence
 - 1.5 Operational Safety
 - 1.6 Electrical Safety
 - 1.7 Prevention From Pressurised air
 - 1.8 Preventions From Hazardous and Flammable Materials
 - 1.9 General Maintenance Conditions
 - 1.10 Guarantee and Spare Parts Policies
 - 1.11 Service Assistance
 - 1.12 Damage During Transportation
 - 1.13 Pre-delivery Rust Prevention Treatment
 - 1.14 Storage of The Machine

1.2. GENERAL INFORMATIONS

- 2.1 Design and Operations
- 2.2 Machines Definition
- 2.3 Process Flow Sheet (10 99 063-MD-01)

1.3. TRANSPORT AND ERECTION

- 3.1 Transportation and Storage Instructions
- 3.2 Installation Instructions

1.4. COMMISIONING AND INSTALLATION INSTRUCTIONS

- 4.1 Commisioning and Installation Instructions
- 4.2 Performance Values Control
- 4.3 Commissioning

1.5. OPERATION

- 5.1 Daily Operation Instruction
- 5.2 Machine Stops Instruction
- 5.3 Operation Instruction After Long-Term Down Time

1.6. MALFUNCTION

- 6.1 General Malfunctions Instructions



INTECNEA S.L.

Section	00
Equipment	-
Pos No	-
Revision	00
Page No	2/4

GRINDING PLANT

1.7. MAINTENANCE AND REPAIRMENT

- 7.1 General Maintenance Instructions Before Operating
- 7.2 Check and Maintenance Points
- 7.3 Repairment
- 7.4 General Lubrication Instructions

1.8. SPARE PARTS

2. ENGINEERING

- 2.1 Plant Concrete Plan (10 99 063-B)
- 2.2 Steel Platform (10 99 063-C1)
- 2.3 Automation Flow Sheet (10 99 063-DE-01)
- 2.4 Process flow sheet (10 99 0630-MD-01)
- 2.5 Pressurised Air Schema (10 99 063-MD-03)
- 2.6 Consumption List (10 99 063-MD-02)
- 2.7 Electric Motor List (10 99 063 DE-01)
- 2.8 Electric Load List (10 99 063 DE-02)
- 2.9 Instrument List (10 99 063 DE-03)
- 2.10.1 Grinding Plant (20 EPT 0063 00-MY-1)
- 2.10.2 Grinding Plant (20 EPT 0063 00-MY-2)
- 2.11 Grinding Plant Loads (20 EPT 0063-MY-L)
- 2.12 Lubrication Chart (10 99 063-MD-04)
- 2.13 Machine and Equipments Technical Specifications

3. MACHINE EQUIPMENT

(2.FOLDER)

- 1 Raw Material Hooper (10 44 030 01 0002)
- 2 Feeder (10 45 080 0008)
- 2.1 Weighing Control (28 017 BS 0001)
- 3 Raw Material Hopper (10 44 007 00 0002)
- 4 Belt Conveyor Under Hopper (10 45 065 0026)
- 4.1 Weighing Control (28 017 BS 0003)
- 5 Mill Feeding Belt Conveyor (10 45 065 0024)
- 6 Ball Dosing Machine (15 08 071-S10)



INTECNEA S.L.

Section	00
Equipment	-
Pos No	-
Revision	00
Page No	3/4

GRINDING PLANT

- 7 Ball Mill (10 01 EBM 250 0062)
 - 7.1 APPENDIX-1 BALL MILL LAYOUT PLAN
 - 7.1.1 Mill Layout Plan(10 01 EBM 250 0062)
 - 7.1.2 Frame Layout Plan(15 01 EBM 250 01 0062)
 - 7.1.3 Concrete Plan (11 01 EBM 250 01 0062)
 - 7.1.4 Additional Concrete Under Drive Unit(11 01 EBM 250 11 0006)
 - 7.1.5 Additional Concrete Under Housing (11 01 EBM 250 11 0001)
 - 7.2 APPENDIX -2 BALL MILL
 - 7.2.1 Ball Mill Complete (10 01 EBM 250 0062)
 - 7.2.2 Liner Complete (15 01 EBM 250 32 00 0062)
 - 7.3 APPENDIX -3 DRIVE UNIT
 - 7.3 Drive Unit (15 01 EBM 250 28 0062)
 - 7.3.1 EGC Gear Coupling Manual
 - 7.3.2 EFC Elastic Coupling Operation Manual
 - 7.3.3 GEARBOX
 - 7.3.3.1 Gearbox Operation Manual
 - 7.3.3.2 EHG Gearbox Complete (10 02 EHG 060 0001-H13)
 - 7.3.3.3 Gearbox Cooling Schema (10 02 EHG 060-HS-01)
 - 7.3.3.4 Cooling Fan Manual
 - 7.3.3.5 Fan Flow-Monitor(psr-ps)
 - 7.3.4 MOTOR **(3.FOLDER)**
 - 7.3.4.1 Motor Data Sheet
 - 7.3.4.2 Motor Complete
 - 7.3.4.3 Motor Manual
 - 7.3.5 DRUM BRAKE MANUAL
 - 7.3.5.1 Drum Brake Technical Specification
 - 7.3.5.2 Drum Brake Manual
 - 7.3.5.3 Drum Brake Thruster Manual
 - 7.3.5.4 Drum Brake Thruster Catalog



INTECNEA S.L.

Section	00
Equipment	-
Pos No	-
Revision	00
Page No	4/4

GRINDING PLANT

7.4 APPENDIX-4 AUTOMATIC LUBRICATION SYSTEM

- 7.4.1 Barrel Type Gear Lubrication System
- 7.4.2 Lubrication Schema (10 01 EBM 250 0062-DM-01)
- 7.4.3 (2/2) Solenoid Valve
- 7.4.4 (3/2) Solenoid Valve
- 7.4.5 Conditioner
- 7.4.6 Danfoss
- 7.4.7 Pump
- 7.4.8 Pump (Multiline 215)
- 7.4.9 Pump Level Sensor
- 7.4.10 SSV Distributor
- 7.4.11 SSVD Distributor
- 7.4.12 Hoses
- 7.4.13 Nozzle

7.5 APPENDIX-5 GEAR SETTINGS FORMS

4. PLC-MCC PANELS

(4.FOLDER)

- 4.1 Automation flow sheet(0 99 063-DE-01)
- 4.2 Motor list (0 99 063-DE-01)
- 4.3 Electric load list (0 99 063 DE 02)
- 4.4 Instrument list (0 99 063 DE 03)
- 4.5 Electrical Panel Plan(0 99 063-DE-04)
- 4.6 MCC PLC-(FLB)
- 4.7 MCC PLC-(LCB)
- 4.8 MCC PLC-(MCC)
- 4.9 MCC PLC-(PLC)
- 4.10 MCC PLC-(PT)
- 4.11 MCC PLC-(RIO1)
- 4.12 MCC PLC-(RIO2)



ERSEL



BAUBLOCK

INTECNEA S.L.

Section	00
Equipment	-
Pos No	-
Revision	00
Page No	5/4

GRINDING PLANT

5. INSTRUMENTS

(5.FOLDER)

- 5.1 Inductive Sensor (Sick-ME18-08BPSZC0S)
- 5.2 Danfoss
- 5.3 Rope switch (XY2C_XY2CE2A250)
- 5.4 Limit Switch (Schneider -XCRT215)
- 5.5 Flow Meter (Optiflux-2000)
- 5.6 Clogging Switch (Rexroth-WE1SP-M12X1)
- 5.7 PT 100 Resistance Thermometer